

Model 85535 Controller Series "B"

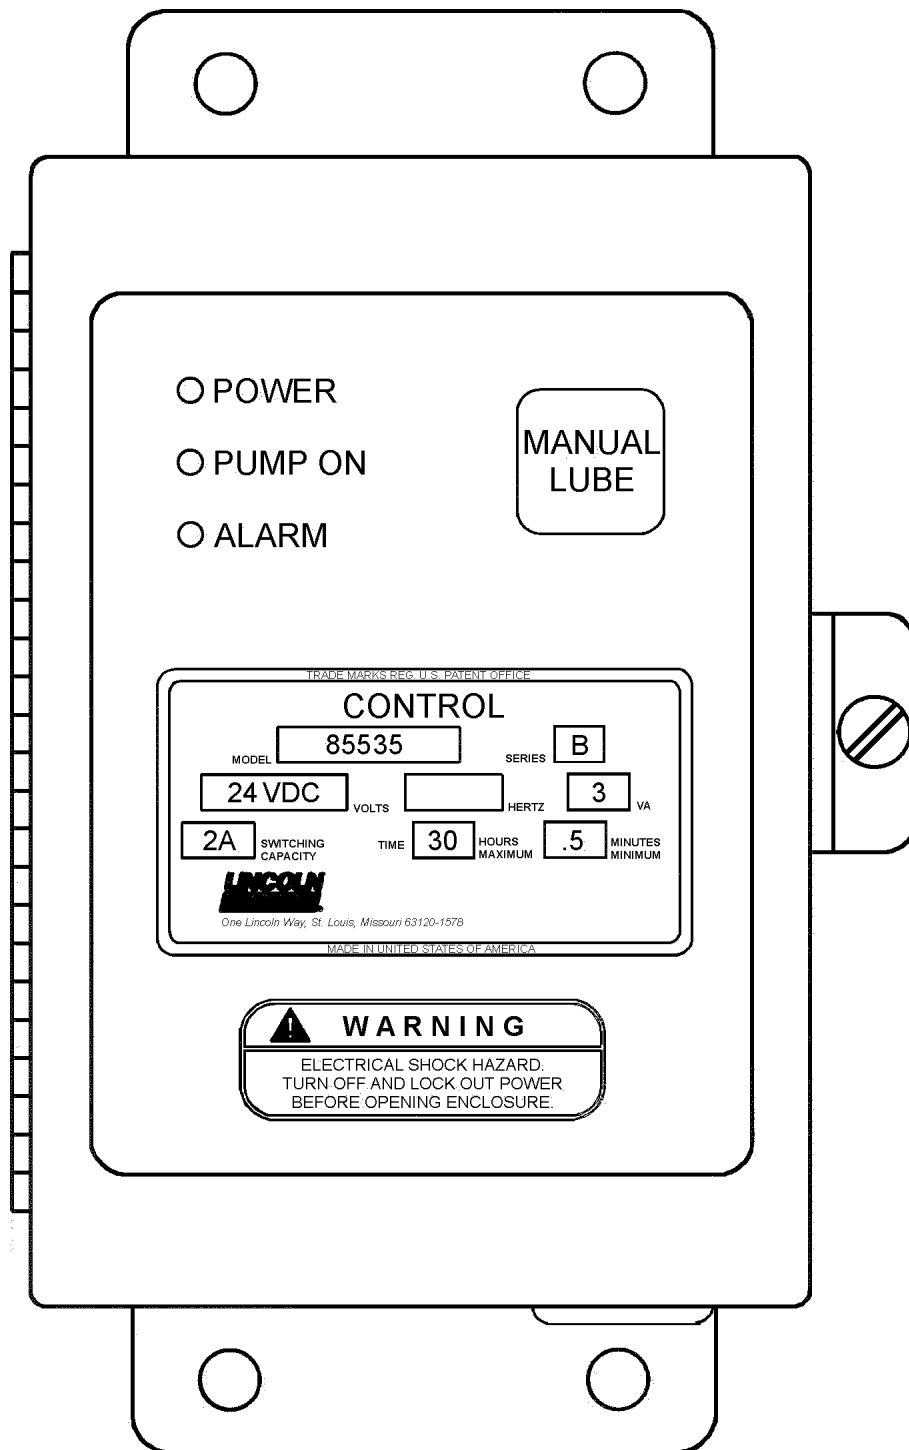



Table of Contents

Safety.....	2
Controller Operation.....	2
Description.....	2
Field Connections.....	3
Wiring Diagram.....	3
Controller Components and Setting the Controller.....	4
Repair Parts List.....	4
Dimensions.....	5
Troubleshooting.....	6

Safety

Read and carefully observe these operating instructions before unpacking and operating the controller! The controller must be operated, maintained and repaired exclusively by persons familiar with the operating instructions. Local safety regulations regarding installation, operation and maintenance must be followed.

Operate this controller only after safety instructions and this service manual are fully understood.

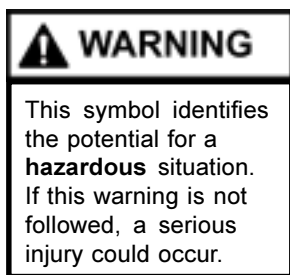

Controller Operation

The time between lube events is determined by the setting of the rotary switch, which selects the numeral setting, and the dipswitch, which selects the units in either minutes or hours.

When used in the timer mode, the pump will remain on for the amount of time that was selected by the dipswitch. Time will be either 30 seconds or 2 minutes (see Timer Mode).

When used in the controller mode, the amount of time that the pump is on is determined by the closing of a pressure switch in the lube supply line (see Controller Mode). Failure of the pressure switch to close within the time setting of the dipswitch, either 30 seconds or 2 minutes, will result in an alarm condition. The alarm LED will turn on and the alarm contact will close. The controller will continue to initiate lube cycles while in alarm.

When the low-level switch closes, the alarm LED will turn on and the alarm contact will close. The controller will continue to initiate lube cycles while in alarm. Alarm condition will remain until low-level switch opens.

Pressing the manual lube button on the enclosure cover will always initiate a lube event.

The memory feature will work as follows:

Dipswitch set to "Memory Off" – Will result in a lube cycle each time power is turned on. Lube cycle will start at the beginning of the on time setting.

Dipswitch set to "Memory On"

1. Power is turned off during the off time (time between lube cycles). When turning power back on will cause the lube cycle to continue from the point of interruption.
2. Power is turned off during the on time or pumping time. Turning power back on will cause the lube cycle to start at the beginning of the on time setting.

Timer Mode

When the dipswitch is set to the timer mode, amount of time that the pump is on will be determined by the setting of the dipswitch. Time will be either 30 seconds or 2 minutes.

Controller Mode

When the dipswitch is set to the controller mode, a pressure switch must be installed in the lube supply line. This will provide pressure-monitoring capabilities. The pressure switch will reset the controller when the set pressure is detected. The controller will initiate an alarm when the pump fails to develop sufficient pressure to actuate the pressure switch within the dipswitch setting of 30 seconds or 2 minutes.

Description

General Description

Model 85535 controller is used to program the cycle frequency of a lubrication pump. Lube cycles are determined by the setting of internal switches. The cycles times are selected to meet system requirements. During the "ON" time, the air to the pump solenoid will be energized.

Appropriate Use

- Model 85535 is exclusively designed for use in a Centralized Lubrication System.
- The maximum ratings given should not be exceeded.
- Any other use not in accordance with the instructions will result in loss of claim for warranty and liability.

Product Specification:

Input Voltage:	21 VDC to 30 VDC
Current Consumption:	100 MA (less external load)
Load Relay Contact:	2 amps inductive load at 30 VDC
Alarm Relay Contact:	2 amps inductive load at 30 VDC
Enclosure:	NEMA 12
Temperature Range:	-40° F to 150° F (-40° C to 65° C)
Net Weight:	4 lbs.
Off Time (adjustable):	30 seconds minimum 30 hours maximum
On Time:	30 seconds minimum 2 minutes maximum
Lubrication System:	Centro Matic

Field Connections


Terminal Strip 1 through 8

Terminal 1	Bat +
Terminal 2	Bat -
Terminal 3	24 VDC source for
Terminal 4	external air to pump solenoid.
Terminal 5	Dry alarm contact
Terminal 6	(contact closes on fault)

Terminal Strip 1 through 4

Terminal 1	Low level switch
Terminal 2	(closes to indicate an alarm)
Terminal 3	System pressure switch (closes to end lube
Terminal 4	cycle). Only used in the Controller Mode.

Observe correct polarity for Terminals 1, 2, 3 and 4.

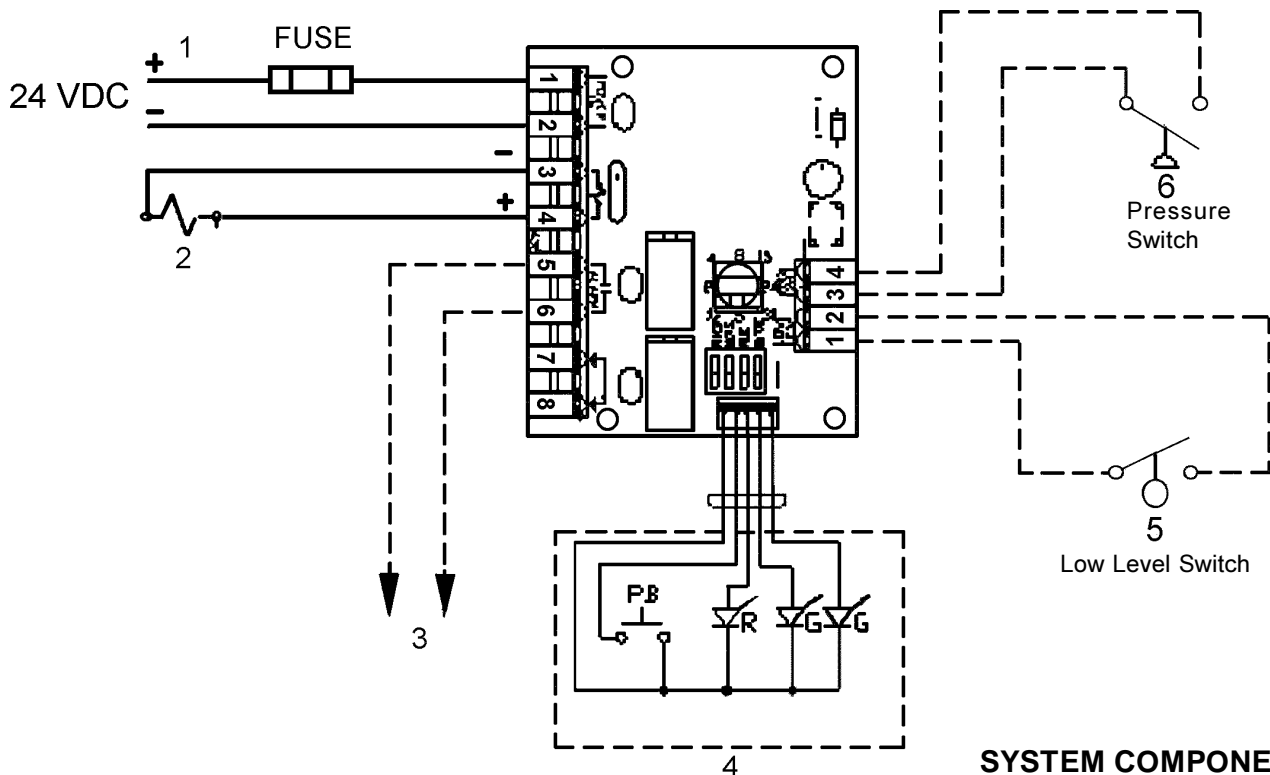

SYSTEM COMPONENTS

Part No.	Qty.	Description
68336	1	Fuse Holder
68552	1	7.5 Amp Fuse
350283	1	24 VDC Solenoid

Illustration 1

Wiring Diagram

1. Incoming Power: 24 VDC.
2. 24 VDC Air Solenoid Valve.
3. Optional Alarm wired by customer.
4. Keypad with indicator lights and manual lube push button.
5. Optional Low Level Switch wired by customer.
6. Pressure Switch wired by customer. Not needed if used in the timer mode.

Controller Components and Setting the Controller

- Mode Switch Identification - See Illustration 2**
- 30 seconds or 2 minutes -** Select the maximum amount of "On Time".
- Timer or Controller -** Select Timer Mode or Controller Mode.
- Hours or Minutes -** Select units for the "Off Time" used with the Rotary Switch.
- Memory Off or Memory On -** Select memory feature.

Off Time Switch - See Illustration 2

Using the Rotary Switch you can select .5, 1, 2, 4, 8, 15, 24 or 30. The units are either minutes or hours as determined by the mode switch setting.

Enclosure Cover - See Illustration 2

- Green LED -** Indicates that power is applied to the controller.
- Green LED -** Indicates that the pump is on.
- Red LED -** Indicates an alarm condition.
- Manual Lube -** Pressing will initiate a lube cycle.

Repair Parts List

Item	Quan.	Description	Part Number
1	1	Timer Board	250599
2	1	Keypad Ass'y	249695



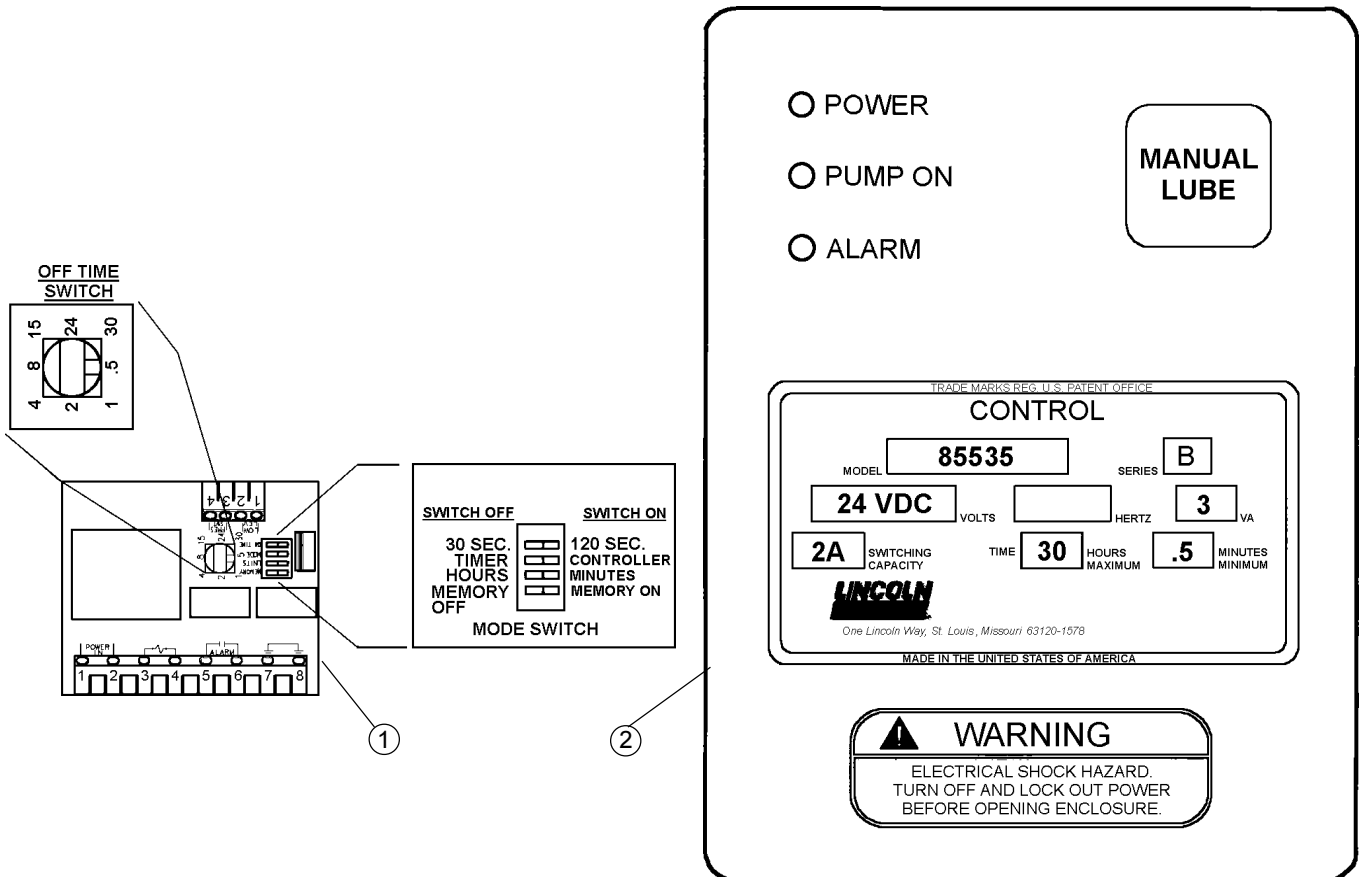


Illustration 2

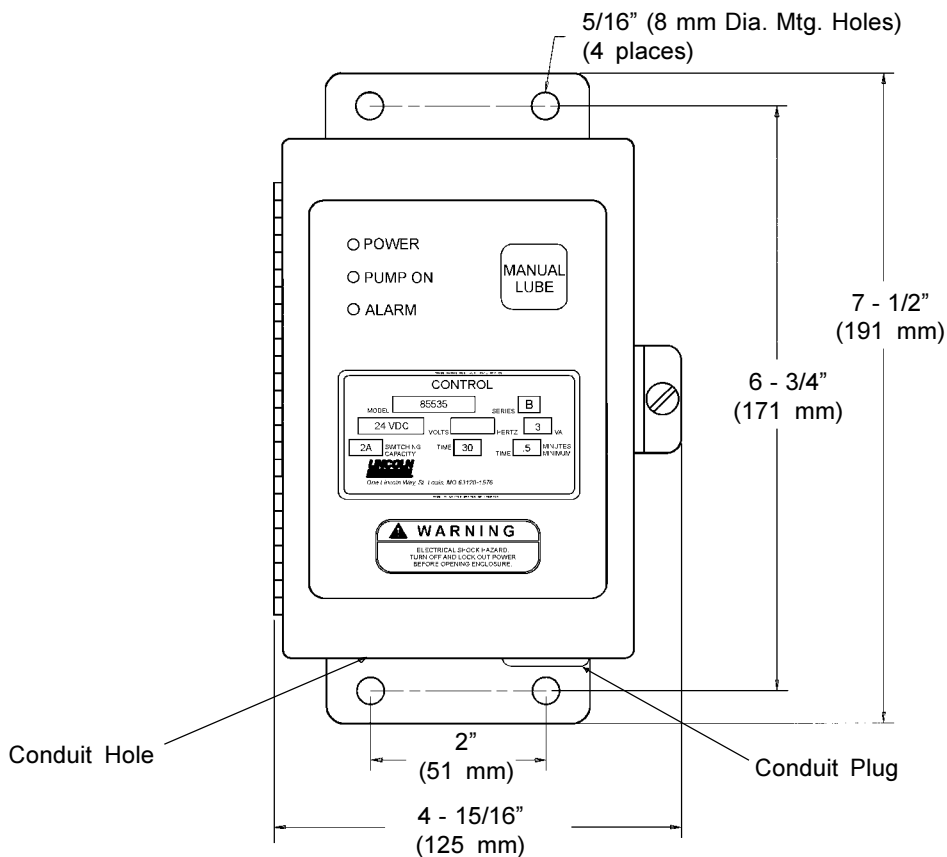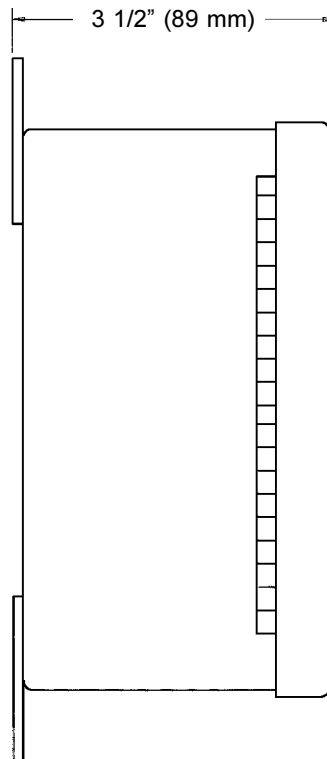

Dimensions

Lube System without Alarm Monitoring

Condition	Possible Cause	Corrective Action
Controller does not operate.	No electric power to controller.	Turn on electric power to pump. "Power" L.E.D. should light, "PUMP ON" L.E.D. should light when "MANUAL LUBE" is pressed.
"PUMP ON" L.E.D. lights, but load connected to terminals 3 & 4 will not energize.	Printed circuit board failure.	Remove and replace.
Load connected to terminals 3 & 4 energized, but "PUMP ON" L.E.D. does not light.	Printed circuit board failure or keypad failure.	Remove and replace.
Bearing points are over lubricated.	Timer/Controller memory mode is set to off.	Turn on memory mode of timer/controller.
	Injector output adjustment setting too high.	Readjust to lower setting.
Bearing points are under lubricated.	Timer/Controller cycle time setting too low.	Set to longer cycle time or reevaluate lube requirements.
	Injector output adjustment setting too low.	Readjust to right setting.
	Timer/Controller cycle timer setting does not deliver lubricant often enough.	Set to shorter cycle time or reevaluate lube requirements.
	System too large for pump output.	Calculate system requirements per planning manual.

Additional Troubleshooting when Alarm Monitoring is used

Some, but not all, of the injectors are delivering lubricant. There is no alarm condition.	Timer/Controller is set to "Timer".	Set Timer/Controller to "Controller Mode.
	Pressure switch setting is too low.	Adjust pressure setting to setting high enough for all injectors to cycle.
"Lube Alarm" L.E.D. turns and stays on.	Bad electrical connection between Pressure Switch and Timer/Controller.	Check all wiring between Pressure Switch and Timer/Controller.
	Pressure switch setting is too high.	Adjust pressure switch to setting high enough for all injectors to cycle.
	Pressure Switch is defective.	Repair or replace.
	Printed circuit board is defective.	Replace printed circuit board.
	Low level switch wired incorrectly.	Check low level switch wiring and correct if necessary. Contact closure must be on low level condition.
	Low system air pressure.	Increase air pressure.

Americas:

One Lincoln Way
St. Louis, MO 63120-1578
USA
Phone +1.314.679.4200
Fax +1.800.424.5359

Europe/Africa:

Heinrich-Hertz-Str 2-8
D-69183 Walldorf
Germany
Phone +49.6227.33.0
Fax +49.6227.33.259

Asia/Pacific:

25 Int'l Business Park
#01-65 German Centre
Singapore 609916
Phone +65.562.7960
Fax +65.562.9967

© Copyright 2001

Printed in USA

Web site: www.lincolnindustrial.com